

# **TACOSETTER INLINE 100**

**BALANCING VALVE** 









# Direct regulation, reading and shut-off of flows in systems

#### DESCRIPTION

Direct hydraulic balancing and control of flows to consumers or in a subsystem.

Balancing valves offer a quick, easy and accurate method of adjusting the flow rates through heating, ventilation, air conditioning and cooling systems.

Correct balancing of hydraulic circuits ensures optimum energy distribution, resulting in more efficient and economical operation in accordance with the energy saving regulations provided for by legislation.

With TacoSetter Inline 100 balancing valves, any qualified fitter can set the appropriate flow rate using the unique flow measurement device,

avoiding investments in training and costly measuring devices.

### **INSTALLATION POSITION**

The valve can be installed in a horizontal, vertical or inclined position. Care should be taken that the arrow is pointing in the direction of the flow.

#### **OPERATION**

The flow measurement is based on the principle of a baffle float with return spring. The flowmeter is built into the housing.

The balancing can be carried out with a screwdriver at the adjusting screw. The reading position is the bottom line of the baffle float.


# **ADVANTAGES**

- Accurate and fast adjustment with scale and without the aid of diagrams, tables or measurement devices
- Direct reading of the set volume flow in I/min
- Variable installation position, maintenance-free
- Regulating valve with isolating facility (rest leakage possible)
- Additional types are also available as make resistant to dezincification

# **BUILDING CATEGORIES**

For pipe installations in drinking water, heating and cooling area:

- Apartment blocks, housing estates, multiple dwelling units
- Residential care facilities and hospitals
- Administration and service buildings
- Hotels and restaurants, industrial kitchens
- School buildings and sports facilities
- Commercial and industrial buildings
- Facilities with partial use, such as barracks, camping sites

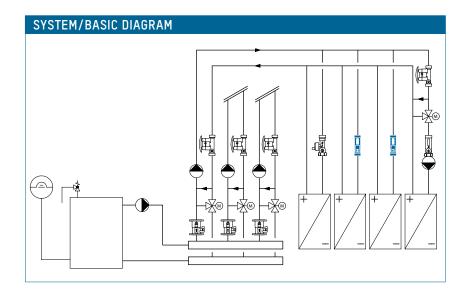

# TACOSETTER INLINE 100 | BALANCING VALVE

### **SPECIFICATION TEXT**

See www.taconova.com

#### **TECHNICAL DATA**

#### General

- Operating temperature T<sub>0 max</sub>: 100 °C
- Operating pressure P<sub>0 max</sub>: 10 bar
- Measuring accuracy: ±10 % of the indicated value
- k<sub>vs</sub> value and measurement range see «Type overview»
- Female thread (cylindrical) to DIN 2999 / ISO 7 or male thread 6 (cylindrical) to ISO 228

#### Material

- Housing: see «Type overview»
- Sight glass: heat- and impact resistant plastic
- Seals: EPDM

#### Fluids

- Heating water (VDI 2035;
  SWKI BT 102-01; ÖNORM H 5195-1)
- Cooling water (DIN 1988-7)
- Potable water (with SVGW-certificate)
- Water and proprietary additives used against corrosion and freezing (see document «Correction curves»)

### APPROVALS / CERTIFICATES

SVGW, KTW, ACS, WaterMark (for DZR versions only)

#### TYPE OVERVIEW

TacoSetter Inline 100  $\,$  | Balancing valve made of brass with female thread

Order no.	DN	G × Rp	Measuring range	$\mathbf{k}_{vs}$ (m <sup>3</sup> /h)
223.1202.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	0,3 - 1,5 (l/min)	0,25
223.1203.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	0,6 - 2,4 (l/min)	0,6
223.1204.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	1,0 - 3,5 (l/min)	1,35
223.1208.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	2,0 - 8,0 (l/min)	1,8
223.1209.000	15	3/4" × 1/2"	3,0 - 12,0 (l/min)	1,85

TacoSetter Inline 100 | Balancing valve made of brass with male thread


Order no.	DN	G × G	Measuring range	$\mathbf{k}_{vs}$ (m <sup>3</sup> /h)
223.1233.000	15	3/4" × 3/4"	0,6 - 2,4 (l/min)	0,6
223.1234.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>3</sup> / <sub>4</sub> "	1,0 - 3,5 (l/min)	1,35
223.1238.000	15	<sup>3</sup> / <sub>4</sub> " × <sup>3</sup> / <sub>4</sub> "	2,0 - 8,0 (l/min)	1,8
223.1239.000	15	3/4" × 3/4"	3,0 - 12,0 (l/min)	1,85
223.1300.000	20	1" × 1"	4,0 – 15,0 (l/min)	5,0
223.1302.000	20	1" × 1"	8,0 - 30,0 (l/min)	5,0
223.1305.000	20	1" × 1"	10,0 - 40,0 (l/min)	5,0

TacoSetter Inline 100 | Balancing valve made of dezincification-resistant (DZR) brass with female thread

Order no.	DN	G × Rp	Measuring range	$\mathbf{k}_{vs}$ (m <sup>3</sup> /h)
223.1204.104	15	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	1,0 - 3,5 (l/min)	1,35
223.1208.104	15	3/4" × 1/2"	2,0 - 8,0 (l/min)	1,8
223.1209.104	15	3/4" × 1/2"	3,0 - 12,0 (l/min)	1,85

TacoSetter Inline 100 | Balancing valve made of dezincification-resistant (DZR) brass with male thread

Order no.	DN	$G \times G$	Measuring range	$\mathbf{k}_{vs}$ (m <sup>3</sup> /h)
223.1232.104	15	3/4" × 3/4"	0,3 - 1,5 (l/min)	0,25
223.1233.104	15	3/4" × 3/4"	0,6 - 2,4 (l/min)	0,6
223.1234.104	15	3/4" × 3/4"	1,0 - 3,5 (l/min)	1,35
223.1238.104	15	<sup>3</sup> / <sub>4</sub> " × <sup>3</sup> / <sub>4</sub> "	2,0 - 8,0 (l/min)	1,8

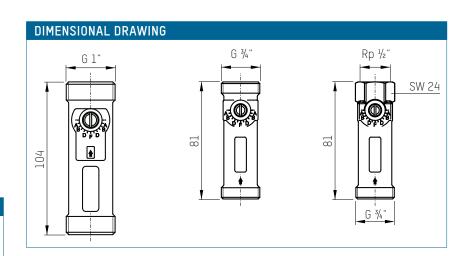


# **GLYCOL CORRECTION CURVES**

There is a separate diagram for TacoSetter up to DN25 and its flow ranges with nine correction curves for use of anti-frost and anti-corrosion agents.

Corrections are not required for larger dimensions as the deviation lies within the measuring tolerance.

See www.taconova.com

# TACOSETTER INLINE 100 | BALANCING VALVE

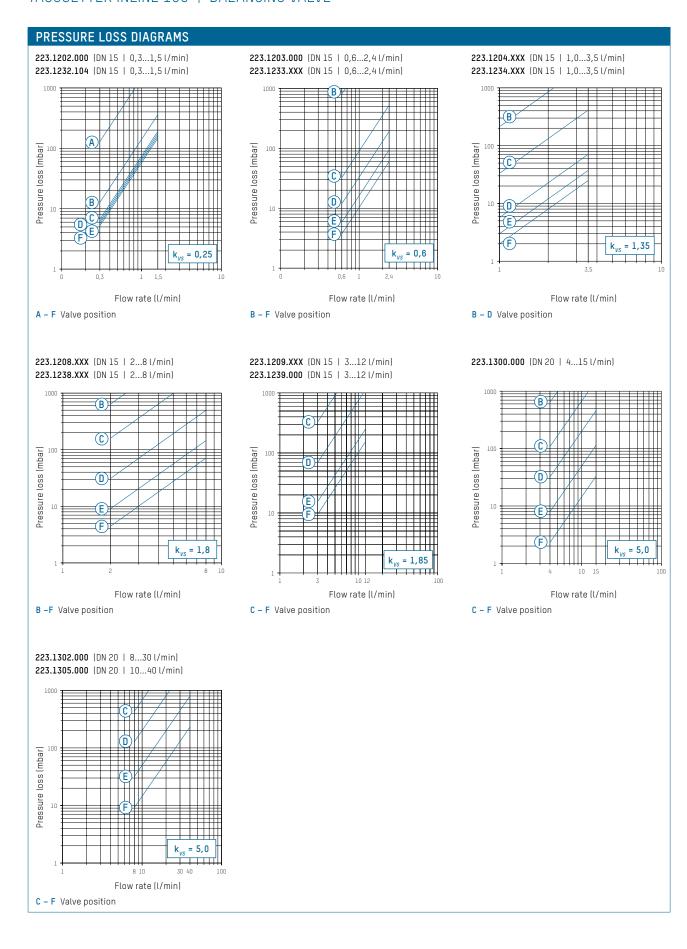

# TACOSETTER INLINE 100 | BALANCING VALVE

### **ACCESSORIES**





### SYSTEM SCREW CONNECTION FITS TO TACOSETTER INLINE

Comprising a cap nut, clamp ring and support sleeve

Order no.	G × mm	Version for	Fits to
210.3325.000	³¼" × 15	Copper pipe 15/1 Eurocone	DN 15

Screw connections with cap nut and insert

Order no.	G × R	Version for	Fits to
		½" thread, conically	
210.6221.000	<sup>3</sup> / <sub>4</sub> " × <sup>1</sup> / <sub>2</sub> "	sealing, dezincification-	DN 15
		resistant	
210.6632.000	1" × ¾"	¾" thread, flat-sealing	DN 20
210.6633.000	1¼" × 1"	1" thread, flat-sealing	DN 20
210.6222.000	3/4" × 1/2"	½" thread, self-sealing	DN 15