


Via monte Nero, 40/B - 21049 TRADATE (VA) ITALY Tel: +39 (0)331841070 Fax:+39 (0)331841950 - e-mail:datexel@datexel.it - www.datexel.it

FEATURES

- Universal Analog Input
- Relay Outputs: 2 SPDT + 2 SPST (version with 4 thresholds)
- Relay Outputs: 2 SPDT (version with 2 thresholds)
- 1 V/mA Analog Output for signal transmission
- 1500 Vca galvanic isolation on all ways
- High Accuracy
- EMC compliance CE Mark
- DIN rail suitable mounting (EN-50022)

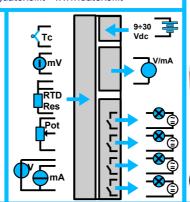

Universal Analog Input Configurable Trip Amplifier with display

DAT 5028



GENERAL DESCRIPTION

The DAT 5028 device is able to acquire RTD or Tc sensors, mV, V or mA input signals connected to the universal analog input. By means of pushbutton and 4-digit display on the front panel, four different trip alarms are configurable. Each alarm threshold commands an output relay. Input signal can be retransmitted on the analog output in a Voltage or Current signal, configurable by means of dip-switch on the side of the device.

By means of an internal 16 bit converter, the device guarantee a high accuracy and a stable measure versus time and temperature.

The 1500 Vac isolation on all ways removes eventual ground-loop effects, allowing the use of the device even in the heavy environmental conditions. In function of the number of thresholds necessary to the user, the device can be supplied in two different versions:

DAT5028-4 with 4 thresholds (2 SPDT + 2 SPST);

DAT5028-2 con with 2 thresholds (2 SPDT).

DAT 5028 is in compliance with the Directive 2004/108/EC on the electromagnetic compatibility.

The device is housed in a rough self-extinguishing plastic container which, thanks to its thin profile of 22.5mm only, allows a high density mounting on EN-50022 standard DIN rail.


Before to install the device, please read the "Installation Instruction" section. Connect power supply, analog input, relay outputs and analog output as shown in the "Wiring" section.

In normal conditions, the display must always show a value.

To simplify handling or replacing of the device, it is possible to change configuration or remove the wired terminals even with the device powered.

TRIP OPERATION MODE

The relay goes on when the input signal is higher than the set-point level for at least the delay time "t on" (mS). The relay goes off only when the input signal is lower than the hysteresis value for at least delay time.

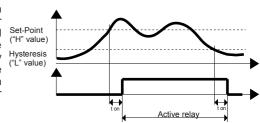

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

Analog Inputs

Type	Range	Accuracy	Linearity	Thernal Drift
100 mV	-100 / +100 mV	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
10 V	-10 / +10 V	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
20 mA	0 / 20 mA	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Pt100	-200 / +850 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Pt1K	-200 / +200 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Ni100	-60 / +180°C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Ni1K	-60 / +150 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Res	0 / 2 Kohm	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Pot	0 / 100 %	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc J	-210 / +1200 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc K	-210 / +1370 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc R	-50 / +1760 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc S	-50 / +1760 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc B	+400 / +1825 C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc E	-210 / +1000 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc T	-210 / +400 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C
Tc N	-210 / +1300 °C	±0.05 % f.s.	±0.1 % f.s.	100 ppm/°C

Lead wire res. influence

RTD (3 wires) mV. Tc

 $0.05 \%/\Omega (50 \Omega \text{ max})$ < 0.8 uV/Ohm

Excitation current Pot. Nominal value Sample Time Warm-up time

RTD, Res, Pot

~ 0.7 mA 2 KOhm 1 sec 3 min

Digital Outputs

n.2 SPDT + n.2 SPST Relavs Max Load (resistive)

Min Load Max Voltage

Dielectric strength between contacts Dielectric strength between coil and contacts 2 A @ 250 Vac (per contact) 2 A @ 30 Vdc (per contact) 5Vdc, 10mA 250Vac (50 / 60 Hz) ,110Vdc 1000 Vac, 50 Hz, 1 min. 4000 Vac, 50 Hz, 1 min.

Analog Output

Type	Range	Accuracy	Linearity	Thermal Drift
10 V	0 / +10 V	±0.1 % f.s.	±0.05 % f.s.	100 ppm/°C
20 mA	0 / +20 mA	±0.1 % f.s.	±0.05 % f.s.	100 ppm/°C
Load Resi	istance		< 500 Ohr	n (current output)

Auxiliary Voltage

< 500 Ohm (current output) > 5 KOhm (voltage output) >12V

Power Supply Supply Voltage

12 ÷ 30 Vdc 120 mA typ (200 mA max.)

Current consumption @ 24 Vdc Rev. Polarity protection

60 Vdc max

Isolations

Immunity

Isolation voltage **EMC** (for industrial environments) 1500 Vac (on all ways)

FN 61000-6-2

EN 61000-6-4

0..90%

Emission

Relative humidity (not cond.)


Temperature & Humidity Operative temperature -30°C .. +60°C -40°C .. +85°C Storage temperature

Housing

Material Mounting Weight

Self-extinguishing plastic DIN rail EN-50022 about 150 g.

CONFIGURATION BY DIP-SWITCHES

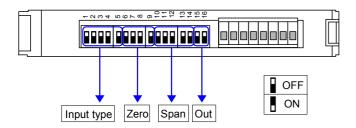

- 1) Set the input type by the dip-switch [1..5] (see TAB.1)
- 2) Set the minimum input scale value (Zero) by the dip-switch [6..9] (see TAB.2 *)
- 2) Set the maximum input value (Span) by the dip-switch [10..14] (see TAB.2 *)
- 4) Set the output type by the dip-switch [15..16] (see TAB.3)
- * Refer to the proper input type range. Needed only if Analog Out retransmission is used.

TAB.1 - Input Type Default Res. 500Ω 100 mV Pt 100 10 V Pt 1K 20 mA Ni 100 Ni 1K Tc J Pot. Tc K Tc R 1 V $\mathsf{Tc}\:\mathsf{S}$ Tc T Тс В Tc E Tc N

TAB.3 - Out

15 16
0-20 mA
4-20 mA
0-10 V
0-5 V

TAB.2 - Input Range

Range selectio			Range selection	· · · · · · · · · · · · · · · · · · ·		Range selection		
Zero	Span		Zero	Span		Zero	Span	I
©≻∞o °C Def.	0 Det 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	9 <u>555</u>	∞≻∞o °C □□□□ Def.	<u>677664</u> °C	5±55± 5±5± 5±	∞≻∞o mV Def.	0124 m√ Def.	9 <u>7</u> 264 9 <u>7</u> 264
6	6	180	-200	6 1 1 1 1 1 1 1 1 1 1	180	-20		18
10	10	190	-100	10	190	-10	1	19
20	20	200	-80	20	200	-8	2	20
30	30	250	-60	30	250	-6	3	25
40	40	300	-50	40	300	-5	4	30
50	50	400	-40	50	400	-4	5	40
75	60	500	-30	60	500	-3	6	50
100	70	700	-20	70	700	-2	7	70
125	80	800	-10	80	800	-1	8	80
150	90	900	0	90	900	1	9	90
175	100	1000	10	100	1000	1	10	100
200	120	1300	20	120	1300	2	12	
225	140	1500	50	140	1500	5	14	
250	150	1700	100	150	1700	10	15	
300	160	1850	150	160	1850	15	16	

Range selection for mA					
Zero	Span				
	Span Span Def. Def. 5.5 6.0 6.5 7.0 7.5 8.0 8.5 9.0 10.0 10.5 11.0 11.5	13.0 13.5 14.0 15.0 15.5 16.0 16.5 17.0 17.5 18.0 18.5 19.0 19.5 19.0			
7.5	12.0	20.0			

Range selection	for Pot.	
Zero	Span	
ωρωο % Def.	9 <u>+2254</u> % Def.	80 512564
.	5	85
15	10	90
20	15	95
25	20	100
30	25	
35	30	
40	35	
45	40	
50	45	
55	50	
60 €	55	
65	□□□□ 60	
70	65	
75	70	
80	75	


Range selection for 10 V					
Zero		Span			
9	v Def.	011000 012001	/ Def.	00000 01000	1.7
	-2.0		0		1.8
	-1.0		0.1		1.9
	-0.8		0.2		2.0
	-0.6		0.3		2.5
	-0.5		0.4		3.0
	-0.4		0.5		4.0
	-0.3		0.6		5.0
	-0.2		0.7		7.0
	-0.1		8.0		8.0
	0		0.9		9.0
	0.1		1.0		10.0
	0.2		1.2		
	0.5		1.4		
	1.0		1.5		
	1.5		1.6		
	0.5		1.4 1.5		

CONFIGURATION OVERVIEW

The configuration of the device, can be controlled by means of the push buttons and the 4-digit display on the front side of the device.

In normal operation, the display shows the actual value of the analog input. To enter in the view mode, follow the next procedure:

- 1) press the "ESC" button : it will be displayed the label "In "
- 2) press the "ESC" button again, it will be displayed the input type value (see tab.4).
- 3) Keep to press the "ESC" button to visualize all of the setting values of the device (follow the next list:

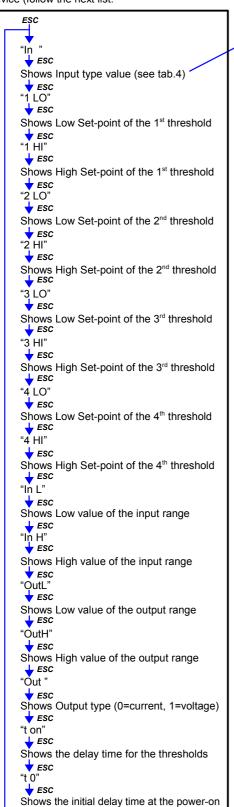


,	TAB.4 – Input Type					
	100 mV	1				
	10 V	2				
	20 mA	3				
	Tc J	4				
	Tc K	5				
	Tc R	6				
	Tc S	7				
	Tc T	8				
	Tc B	9				
	Tc E	10				
	Tc N	11				
	Res	12				
	Pt 100	13				
	Pt 1K	14				
	Ni 100	15				
	Ni 1K	16				
	Pot	17				
		1				

4) To exit from the view mode don't press any button for 5 second: the device will automatically visualize the actual input measure.


THRESHOLD CONFIGURATION


To configure the threshold values press both the buttons ("SET"+"ESC") for at least 5 seconds.

- 1) Press the button "ESC" to scroll through to the list until the desired parameter to be configured appears.
- 2) Press the button "SET" to confirm the selection of the parameter; the display shows the value currently programmed.
- 3) Press the button "UP" or "DOWN" to modify the value: keeping pressed the button "UP" or "DOWN" to increase the speed of variation of the numbers.
- 4) When the desired value has been reached press both the buttons for at least 4 seconds. Don't press any button for 5 second to discard the changes.

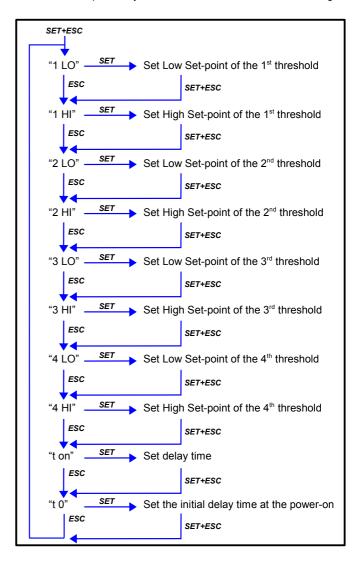


5) Repeat the step from 1 up to 4 for each parameter to configure. To exit from the threshold configuration don't press any button for 5 second: the device will automatically visualize the actual input measure in function of the programming performed.

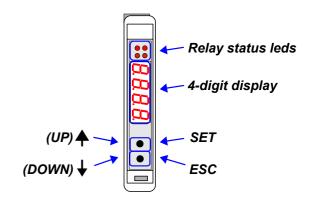

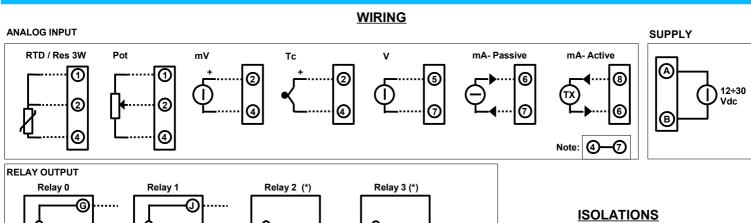


(

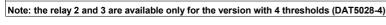

C


Œ

C

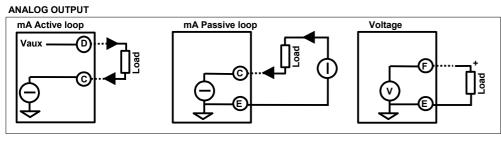

N

(M)

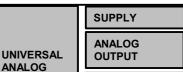

INPUT

2 SPDT RELAYS 2 SPST RELAYS

INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and at least one of the overload conditions exist.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.

Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.

LIGHT SIGNALLING

LED	COLOR	STATE	DESCRIPTION	
R <i>n</i>	RED	ON	Relay [n] excited	
		OFF	Relay [n] released	

HOW TO ORDER DAT 5028 can be supplied with the configuration specified by the customer. It is necessary to specify the number of necessary thresholds (2 or 4). Refer to the "Technical Specification" section for the output type available. ORDER CODE EXAMPLE: DAT 5028 - 2 | Number of thresholds: DAT 5028-2 (2 SPDT relay) DAT 5028-4 (2 SPDT relay + 2 SPST relay) = Requested = Optional

MECHANICAL DIMENSIONS (mm)

